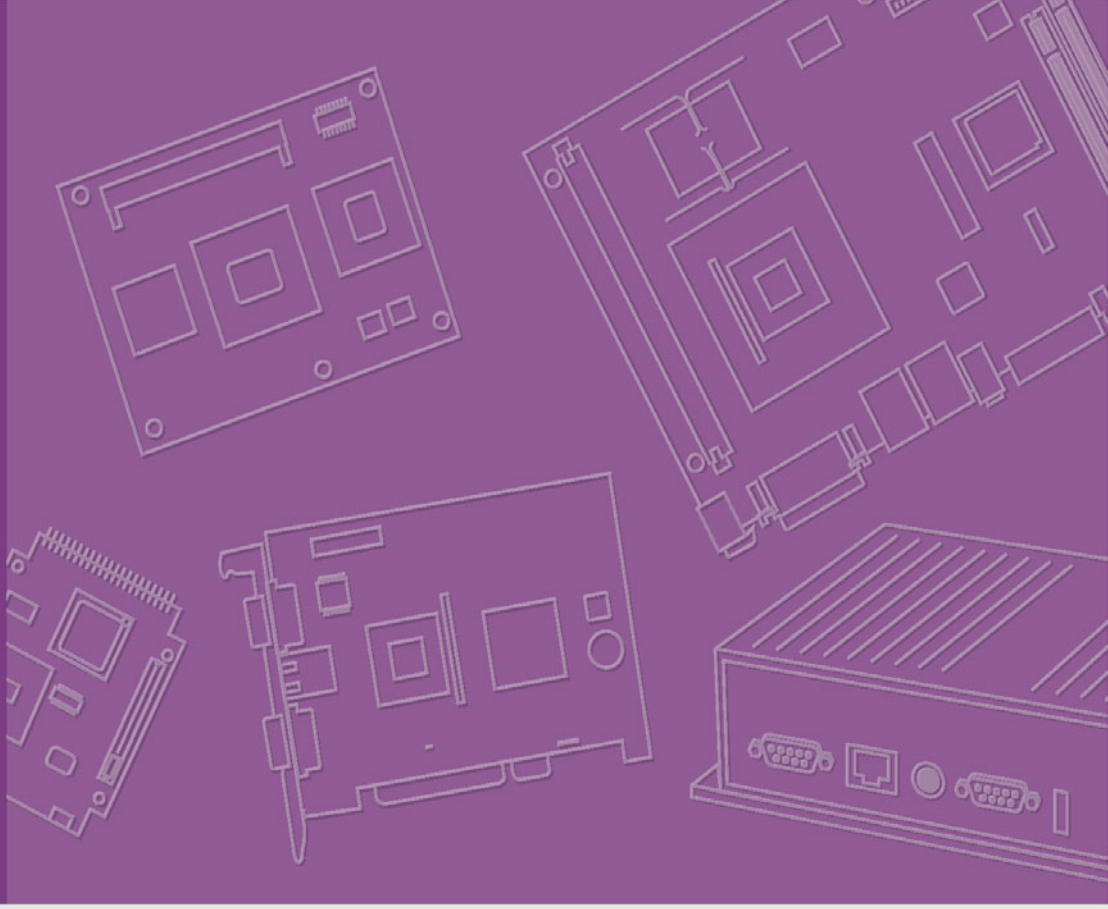

User Manual

IPC-630 Series

4U Rackmount Industrial Chassis with Alarm Notification

Trusted ePlatform Services

ADVANTECH

Copyright

The documentation and the software included with this product are copyrighted 2009 by Advantech Co., Ltd. All rights are reserved. Advantech Co., Ltd. reserves the right to make improvements in the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written permission of Advantech Co., Ltd. Information provided in this manual is intended to be accurate and reliable. However, Advantech Co., Ltd. assumes no responsibility for its use, nor for any infringements of the rights of third parties, which may result from its use.

Acknowledgements

The IPC-630, PCE-7B13, PCE-5B12, PCA-6115, PCA-6114, PCA-6114P4, PCA-6114P7, PCA-6114P10, PCA-6114P12, PCA-6114P12X, PCA-6113P4R, PCA-6113P7X, AIMB-740, AIMB-742, AIMB-744, AIMB-750, AIMB-760, AIMB-762, AIMB-763, AIMB-764, AIMB-766, AIMB-554, AIMB-556 and AIMB-560, AIMB-562, AIMB-564 are trademarks of Advantech Co., Ltd.

All other product names or trademarks are properties of their respective owners.

On-line Technical Support

For technical support and service, please visit our support website at:

http://www.advantech.com/support

Part No. 2002063001 Edition 2

Printed in China June 2009

Safety Instructions

1. Read these safety instructions carefully.
2. Keep this user manual for later reference.
3. Disconnect this equipment from AC outlet before cleaning. Do not use liquid or spray detergents for cleaning.
4. For pluggable equipment, the power outlet shall be installed near the equipment and shall be easily accessible.
5. Keep this equipment away from humidity.
6. Put this equipment on a reliable surface during installation. Dropping it or letting it fall could cause damage.
7. Do not leave this equipment in an environment unconditioned where the storage temperature under 0°C (32°F) or above 40°C (104°F), it may damage the equipment.
8. The openings on the enclosure are for air convection hence protects the equipment from overheating. DO NOT COVER THE OPENINGS.
9. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
10. Place the power cord such a way that people can not step on it. Do not place anything over the power cord. The voltage and current rating of the cord should be greater than the voltage and current rating marked on the product.
11. All cautions and warnings on the equipment should be noted.
12. If the equipment is not used for long time, disconnect it from the power source to avoid being damaged by transient over-voltage.
13. Never pour any liquid into ventilation openings. This could cause fire or electrical shock.
14. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
15. If any of the following situations arises, get the equipment checked by service personnel:
    a) The power cord or plug is damaged.
    b) Liquid has penetrated into the equipment.
    c) The equipment has been exposed to moisture.
    d) The equipment does not work well or you cannot get it to work according to user manual.
    e) The equipment has been dropped and damaged.
    f) The equipment has obvious signs of breakage.
16. **CAUTION:** The computer is provided with a battery-powered real-time clock circuit. There is a danger of explosion if battery is incorrectly replaced. Replace only with same or equivalent type recommended by the manufacture. Discard used batteries according to the manufacturer's instructions.
17. THE COMPUTER IS PROVIDED WITH CD DRIVES COMPLY WITH APPROPRIATE SAFETY STANDARDS INCLUDING IEC 60825.

CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT

18. This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
    a) This device may not cause harmful interference, and
    b) This device must accept any interference received, including interference that may cause undesired operation.
19. **CAUTION:** Always completely disconnect the power cord from your chassis whenever you work with the hardware. Do not make connections while the power is on. Sensitive electronic components can be damaged by sudden power surges.
20. **CAUTION:** Always ground yourself to remove any static charge before touching the motherboard, backplane, or add-on cards. Modern electronic devices are very sensitive to static electric charges. As a safety precaution, use a grounding wrist strap at all times. Place all electronic components on a static-dissipative surface or in a static-shielded bag when they are not in the chassis.
21. **CAUTION:** Any unverified component could cause unexpected damage. To ensure the correct installation, please always use the components (ex. screws) provided with the accessory box.

A Message to the Customer

Advantech customer services

Each and every Advantech product is built to the most exacting specifications to ensure reliable performance in the harsh and demanding conditions typical of industrial environments. Whether your new Advantech equipment is destined for the laboratory or the factory floor, you can be assured that your product will provide the reliability and ease of operation for which the name Advantech has come to be known. Your satisfaction is our primary concern. Here is a guide to Advantech's customer services.

To ensure you get the full benefit of our services, please follow the instructions below carefully.

Technical support

We want you to get the maximum performance from your products. So, if you run into technical difficulties, we are here to help. For the most frequently asked questions, you can easily find answers in your product documentation. These answers are normally a lot more detailed than the ones we can give over the phone.

Please consult this manual first. If you still cannot find the gather all the information or answer questions that apply to your problem, please call your dealer. Please make sure you have the product close at hand. Our dealers are well trained and ready to give you the support you need to get the most from your Advantech products. In fact, most problems reported are minor and are easily solved over the phone.

In addition, free technical support is available from Advantech engineers every business day. We are always ready to give advice on application requirements or specific information on the installation and operation of any of our products.

Product Warranty (2 years)

Advantech warrants to you, the original purchaser, that each of its products will be free from defects in materials and workmanship for two years from the date of purchase.

This warranty does not apply to any products which have been repaired or altered by persons other than repair personnel authorized by Advantech, or which have been subject to misuse, abuse, accident or improper installation. Advantech assumes no liability under the terms of this warranty as a consequence of such events.

Because of Advantech's high quality-control standards and rigorous testing, most of our customers never need to use our repair service. If an Advantech product is defective, it will be repaired or replaced at no charge during the warranty period. For out-of-warranty repairs, you will be billed according to the cost of replacement materials, service time and freight. Please consult your dealer for more details.

If you think you have a defective product, follow these steps:

1. Collect all the information about the problem encountered. (For example, CPU speed, Advantech products used, other hardware and software used, etc.) Note anything abnormal and list any onscreen messages you get when the problem occurs.
2. Call your dealer and describe the problem. Please have your manual, product, and any helpful information readily available.
3. If your product is diagnosed as defective, obtain an RMA (return merchandise authorization) number from your dealer. This allows us to process your return more quickly.
4. Carefully pack the defective product, a fully-completed Repair and Replacement Order Card and a photocopy proof of purchase date (such as your sales receipt) in a shippable container. A product returned without proof of the purchase date is not eligible for warranty service.
5. Write the RMA number visibly on the outside of the package and ship it prepaid to your dealer.

Initial Inspection

When you open the carton, please make sure that the following materials have been shipped:

- Chassis
- User Manual
- Warranty Card
- Accessory box with a package of screws (for fastening the disk drives), four rubber pads, 15 pcs rubber cushions (backplane version) or 7 pcs (motherboard version), one pc of EMI spring shielding (for the backplane version only), a pair of keys, and a pair of ears.

If any of these items are missing or damaged, contact your distributor or sales representative immediately. We have carefully inspected the IPC-630 mechanically and electrically before shipment. It should be free of marks and scratches and in perfect working order upon receipt. As you unpack the IPC-630, check it for signs of shipping damage. (For example, damaged box, scratches, dents, etc.) If it is damaged or it fails to meet the specifications, notify our service department or your local sales representative immediately. Also notify the carrier. Retain the shipping carton and packing material for inspection by the carrier. After inspection, we will make arrangements to repair or replace the unit.

Contents

Chapter 1 General Information 1

1.1 Introduction 2
1.2 Specifications 2
1.2.1 General 2
1.3 Power Supply Options 3
Table 1.1: Power Supply Options 3
1.4 Environmental Specifications 3
Table 1.2: Environmental Specifications 3
1.5 Dimension Diagram 4
Figure 1.1 Dimension diagram 4

Chapter 2 System Setup 5

2.1 Removing the Top Cover 6
Figure 2.1 Removing the top cover 6
2.2 Installing the Backplane or Motherboard 7
Figure 2.2 Yellow label indicating copper stub locations 7
Figure 2.3 Installing the backplane 8
Figure 2.4 Installing a motherboard 8
2.3 Installing CPU Card or Add-on Card 9
Figure 2.5 Installing a full-length CPU card 9
2.4 Hold-down Clamp 10
Figure 2.6 Installing hold-down clamp and rubber cushions 10
Figure 2.7 The circular hole on the hold-down clamp 10
2.5 Installing Disk Drives 11
Figure 2.8 Removing the disk drive housing 11
Figure 2.9 Removing the 3.5" FDD brackets and front covers .11
Figure 2.10 Installing the disk drives 12
2.6 Attaching the Ears 12
Figure 2.11 Attaching the ears 12

Chapter 3 Operation 13

3.1 The Front Panel 14
Figure 3.1 Closed Front panel 14
Figure 3.2 Open Front panel 14
3.1.1 Switches, Buttons and Front I/O Interfaces 15
Figure 3.3 Switch, buttons and front I/O interfaces 15
3.1.2 LED indicators 16
Table 3.1: LED indicator functions 16
3.2 The Rear Panel 17
Figure 3.4 Rear panel of backplane version 17
Figure 3.5 Rear panel of motherboard version 17
3.3 Replacing the Cooling Fan 18
Figure 3.6 Undo the single screw to remove the fan module ... 18
Figure 3.7 Replacing the fan 18
3.4 Cleaning the Filter 19
Figure 3.8 Removing the front door filter 19
Figure 3.9 Removing the fan filter 19
3.5 Replacing the Power Supply 20
3.5.1 The single power supply model 20
Figure 3.10 Replacing the single power supply 20
3.5.2 The redundant power supply model 21

Figure 3.11 Replacing 300W redundant power supply module.. 21
Figure 3.12 Replacing 400W redundant power supply module.. 21
Figure 3.13 Power cord plugs orientation on the socket 22

Chapter 4 Alarm Board 23

4.1 Alarm Board Layout 24
Figure 4.1 Alarm board layout 24
4.2 Alarm Board Specifications 24
Table 4.1: Summary of the connectors on the alarm board 24
4.3 Jumper Settings 26
Table 4.2: J2, PIC Clear jumper 26
Table 4.3: J3, Thermal Sensor jumper 26
Table 4.4: J4, Fan Option jumper 26
4.4 Thermal Sensor 26
Figure 4.2 Thermal sensor location 26

Appendix A Exploded Diagrams 27

A.1 Exploded Diagram 28
Figure A.1 Exploded diagram of the Backplane version 28
Figure A.2 Exploded diagram of the Motherboard version 29

Appendix B Backplane & Motherboard Options..... 31

B.1 Backplane Options 32
Table B.1: PICMG 1.3 Backplane options 32
Table B.2: PICMG 1.0 Backplane options 32
B.2 Motherboard Options 33
Table B.3: ATX Motherboard Options 33
Table B.4: MicroATX Motherboard Options 33

Chapter 1

General Information

This chapter provides general information about the IPC-630. Sections include:

- Introduction
- Specifications
- Power supply options
- Environment specification
- Dimension diagram

1.1 Introduction

The IPC-630 is a 4U-high 15-slot rackmount industrial computer chassis designed for mission-critical applications. It supports either backplane or motherboard.

Audible alarm detection and notification with visible LED indicators

The IPC-630 comes with an audible alarm module. It automatically detects the system operating conditions, such as power, fan, temperature, and HDD, and displays the system status on the front visible LED indicators. Once any failure happens, the alarm module will make a beep to warn users to take necessary actions. This feature reduces the system downtime. Unique alarm detection and notification to reduce system down time.

Outstanding ID and mechanical design

Unlike the classical industrial computer, IPC-630 has an innovative appearance for an industrial computer chassis. The flexible mechanical design supports a single PS/2 or redundant power supply using a power bracket replacement. The shockproof disk drive housing and the rubber cushions protect the system against harsh industrial environments or unexpected shocks. The lockable front door prevents unauthorized access to data storage. All these outstanding features make the IPC-630 an ideal solution for the price, performance and total cost of ownership.

1.2 Specifications

1.2.1 General

- **Construction:** Heavy-duty steel
- **Disk drive capacity:** three 5.25" disk drives (CD-ROM or CD-R/W drive or DVD-ROM drive), one 3.5" FDD, and one internal 3.5" disk drive
- **Front I/O interfaces:** Dual USB port and a reserved 9-pin D-SUB opening
- **Rear I/O interfaces:** a reserved 9-pin D-SUB opening for the backplane version; five reserved 9-pin D-SUB and a 68-pin SCSI openings for the motherboard version
- **LED Indicators:** Bi-color LEDs (green/red) for Power, Temperature, and Fan status; single-color LEDs (green) for HDD activity
- **Switch and Buttons:** System Reset button, Alarm Reset button, and Power switch
- **Cooling fan:** One 114 CFM (12 cm x 12 cm) cooling fan with air filter near the front left of the chassis.
- **Air Filters:** Two easily maintained reusable filters near the front of the system fan and behind the front door
- **Gross Weight:** 18 kg (39.6 lb)
- **Dimensions (WxHxD):**
  - Backplane version: 482 mm x 177 mm x 452 mm (19" x 7" x 17.8");
  - Motherboard version: 482 mm x 177 mm x 502 mm (19" x 7" x 19.8")

1.3 Power Supply Options

Table 1.1: Power Supply Options		
Model Name	**PS-300ATX-ZBE**	**RPS-300ATX-ZE**
Watt	300 W max. (ATX, PFC) (single PS/2)	300 W max. (ATX, PFC) (1+1 redundant)
Input rating	100 ~ 240 Vac (Full range)	100 ~ 240 Vac (Full range)
Output voltage	+5 V @ 30 A, +3.3 V @ 28 A, +12 V @ 15 A, -5 V @ 0.3 A, -12 V @ 0.8 A, +5 Vsb @ 2 A	+5 V @ 25 A, +3.3 V @ 18 A, +12 V @ 16 A, -5 V @ 0.5 A, -12 V @ 0.5 A, +5 Vsb @ 2 A
Minimum load	+5 V @ 0.1 A, +3.3 V @ 0.3 A	+5 V @ 3 A, +3.3 V @ 1 A, +12 V @ 2 A, +5 Vsb @ 0.1 A
MTBF	100,000 hours @ 25° C	100,000 hours @ 25° C
Safety	UL/TUV/CB/CCC	UL/TUV/CB/CCC
Model Name	**PS-400ATX-ZBE**	**RPS-400ATX-ZE**
Watt	400 W max. (ATX, PFC) (single PS/2)	400 W max. (ATX, PFC) (1+1 redundant)
Input rating	100 ~ 240 Vac (Full range)	100 ~ 240 Vac (Full range)
Output voltage	+5 V @ 35 A, +3.3 V @ 25 A, +12 V @ 30 A, -5 V @ 0.8 A, -12 V @ 1 A, +5 Vsb @ 2 A	+5 V @ 35 A, +3.3 V @ 25 A, +12 V @ 28 A, -5 V @ 0.5 A, -12 V @ 1.2 A, +5 Vsb @ 2 A
Minimum load	+5 V @ 3 A, +3.3 V @ 1 A, +12 V @ 1 A, +5 Vsb @ 0.1 A	+5 V @ 3 A, +3.3 V @ 1 A, +12 V @ 2 A, +5 Vsb @ 0.1 A
MTBF	91,000 hours @ 25° C	100,000 hours @ 25° C
Safety	UL/TUV/CB/CCC	UL/TUV/CB/CCC

1.4 Environmental Specifications

Table 1.2: Environmental Specifications		
Environment	**Operating**	**Non-operating**
Temperature	0 to 40°C (32 to 104°F)	-20 to 60°C (-4 to 140°F)
Humidity	10 to 85% @ 40°C, non-condensing	10 to 95% @ 40°C, non-condensing
Vibration	1G rms	2G
Shock	10G (with 11 ms duration, half sine wave)	30G
Safety	CE compliant	

1.5 Dimension Diagram

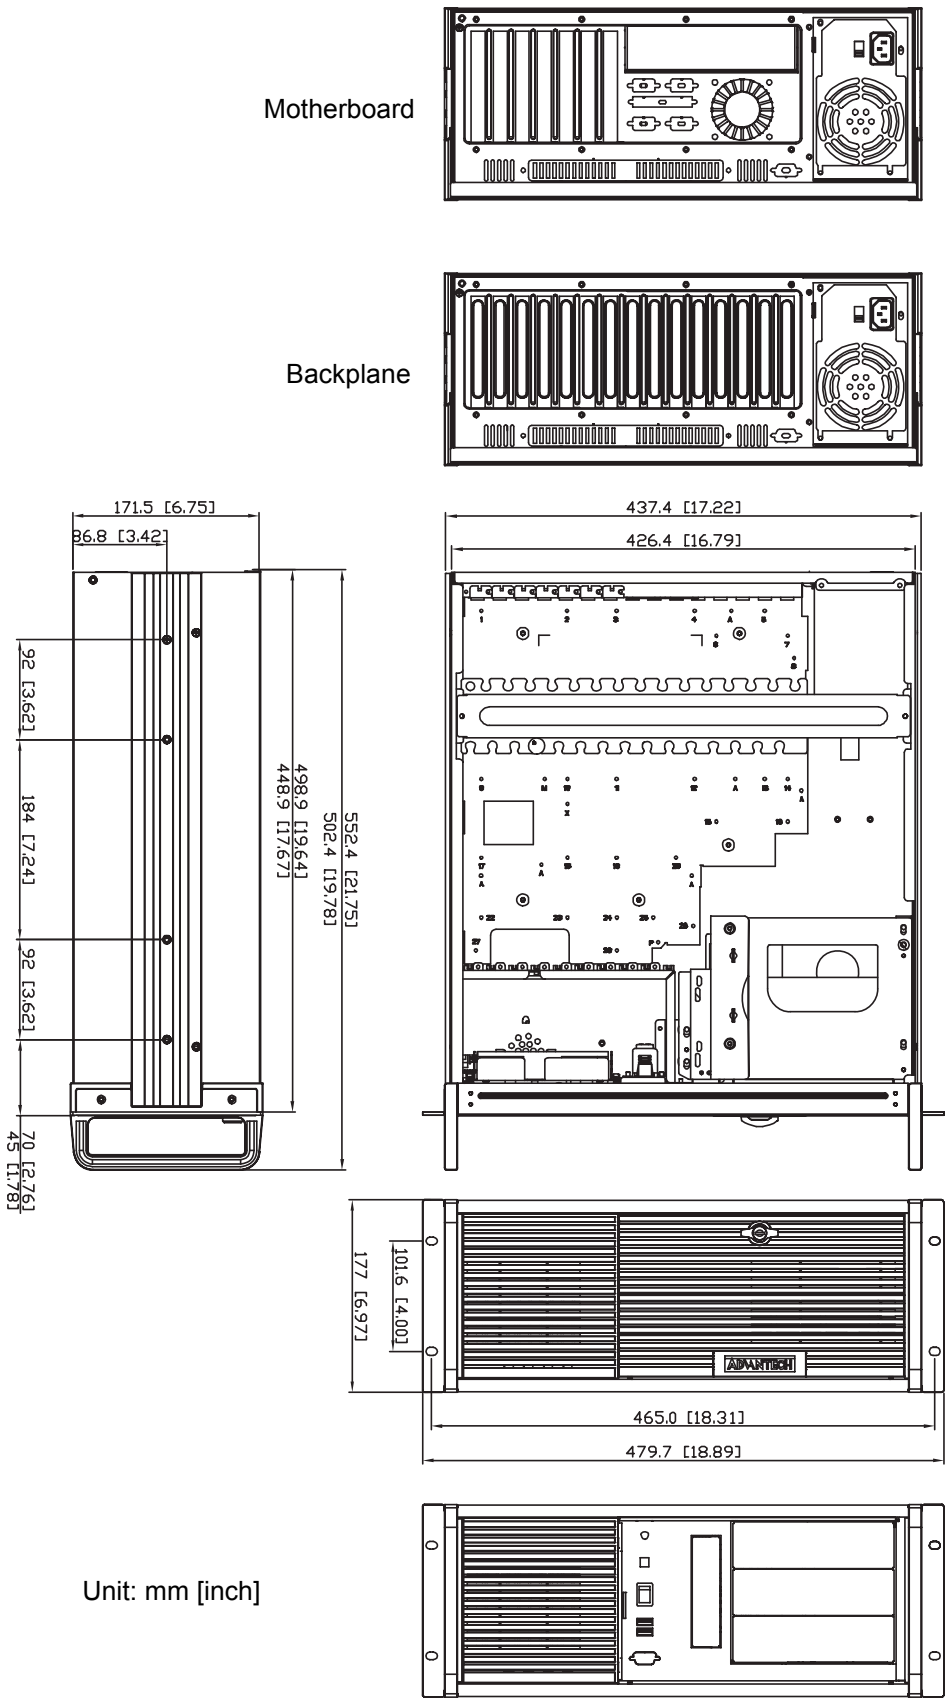

Figure 1.1 Dimension diagram

Chapter 2

System Setup

This chapter introduces the installation process.

Sections include:

- Installing the backplane or motherboard
- Installing the CPU card or add-on card
- Installing disk drives
- Attaching the ears and handles

The following procedures guide users to install the backplane, motherboard, add-on cards, and disk drives into the chassis. Please also refer to Appendix A, Exploded Diagram, for the detailed parts of the chassis

Note! *Use caution when installing or operating the components with the chassis open. Be sure to turn off the power, unplug the power cord and ground yourself by touching the metal chassis before you handle any components inside the machine.*

2.1 Removing the Top Cover

Please refer to Figure 2.1 and proceed as below.

1. Detach the four screws on the left and right of the chassis.
2. Remove the top cover rearwards gently.

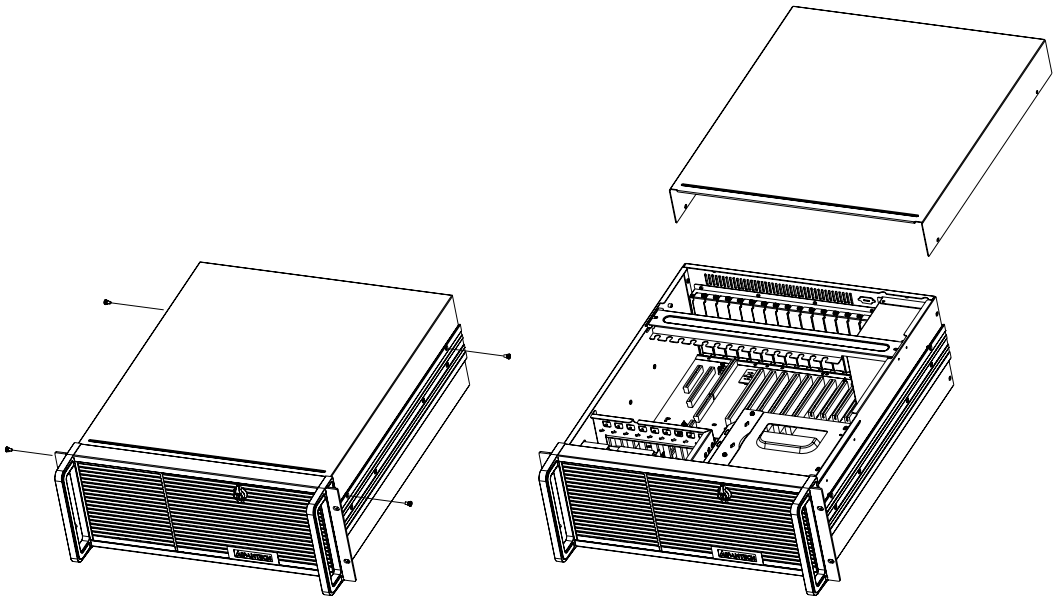

Figure 2.1 Removing the top cover

2.2 Installing the Backplane or Motherboard

The IPC-630 supports either up to 15-slot backplane or ATX/microATX motherboard. To install the backplane or motherboard, please proceed as follows:

1. Dismantle the hold-down clamp by undoing the two screws on its both ends.
2. There is a yellow warning label located inside of the chassis bottom. (see Figure 2.2) It shows the screw locations for attaching the various backplanes or motherboards. Be sure to follow the instruction and fasten the backplane or motherboard onto the chassis with the correct screw locations.
3. While installing a BACKPLANE, fasten it in place and attach the supplied EMI spring shielding with the screws provided.
4. For the PICMG 1.0 BACKPLANE, connect the orange-white wire from connector, HCN1, on the backplane to connector, CN21, on the CPU card.
5. While installing a MOTHERBOARD, attach the motherboard I/O shielding onto the rear plate first. Then fasten the motherboard onto the chassis.
6. Connect the 20-pin (or 24-pin) ATX power connector and the 4-pin +12V power connector from the power supply to the backplane or the motherboard. (For the PICMG 1.0 BACKPLANE, the 4-pin +12 V power connector is connected to the CPU card.)
7. Connect the 9-pin USB wire, PS/2 wire, Power switch wire, and the System Reset switch wire from the chassis to the motherboard.
8. Connect the wire of HDD LED from the chassis to the motherboard.

NUT NUMBER / BP/MP MODEL	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	X	A	M
PCA-6113P4R PCA-6114P7 PCA-6114P12	*	*	*	*	*		*	*	*	*	*	*	*	*			*	*	*	*												
PCA-6114P4 PCA-6114P10	*	*	*	*	*		*	*	*	*	*	*	*	*			*	*		*												
PCA-6114-B	*	*	*	*	*		*	*	*	*	*	*	*	*																		
PCA-6113P7X	*	*	*	*	*		*	*			*	*		*			*			*		*	*		*					*		
PCA-6115	*	*	*	*	*			*	*	*	*	*	*																			
PCA-6114P12X	*	*	*	*	*		*	*	*			*		*			*			*		*	*		*					*		
PCE-7B13-64 PCE-5B12-64	*	*	*	*	*		*		*	*		*		*			*	*		*							*	*				
AIMB-740 AIMB-742	*	*	*				*		*		*			*																		
AIMB-744 AIMB-750 AIMB-760	*	*	*				*				*			*			*		*													
AIMB-762 AIMB-764	*	*	*				*		*		*			*			*		*													
AIMB-542 AIMB-554 AIMB-556 AIMB-560 AIMB-562		*	*				*				*			*					*													*
Be careful to screw the Copper Stub under 10 kgf• cm.																																

Figure 2.2 Yellow label indicating copper stub locations

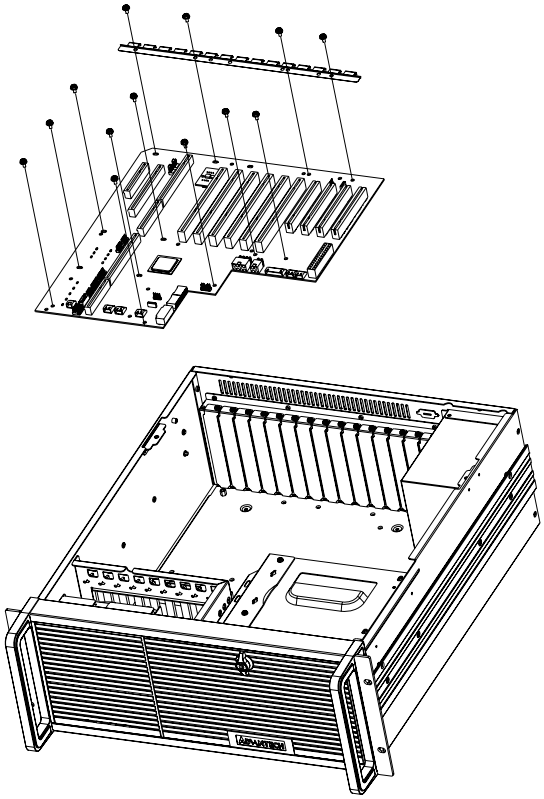

Figure 2.3 Installing the backplane

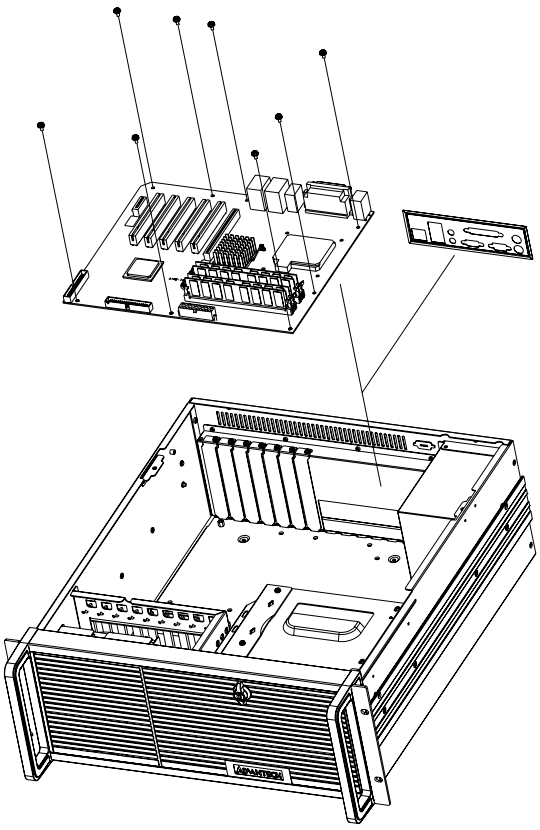

Figure 2.4 Installing a motherboard

2.3 Installing CPU Card or Add-on Card

IPC-630 supports up to 15 add-on cards. To install a CPU card or add-on card, please proceed as follows:

1. Select a vacant PICMG slot for the full-length CPU card, or a PCI/ISA slot for other add-on cards. Then, remove the corresponding I/O bracket attached to the rear plate of the chassis.
2. Insert the CPU card (with CPU, CPU cooler, RAM, and necessary cables installed) or add-on card vertically into the proper slot (See Figure 2.5). For full-length cards, please make sure that the card bracket has been inserted properly and the other edge of the card has been inserted into the plastic guiding fillister. Fasten the card with the screw on top of the I/O bracket.
3. Repeat Step 1 and 2 if there is more than one add-on card to be installed.
4. Connect the 9-pin USB wire, PS/2 wire, power switch wire and the System Reset switch wire from the chassis to the CPU card.
5. Connect the wire of HDD LED from the chassis to the CPU card.
6. For the PICMG1.0 Backplane, connect the orange-white wire from the connector CN20 on the CPU card to the connector, HCN1, on the backplane. Connect the 4-pin +12 V power connector from the power supply to the CPU card.

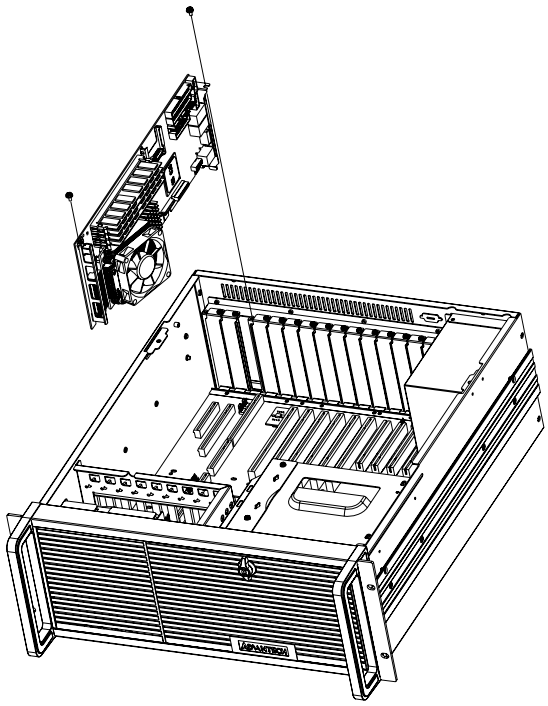

Figure 2.5 Installing a full-length CPU card

2.4 Hold-down Clamp

The hold-down clamp protects all the cards from vibration and shock. After inserting all the cards, re-fasten the hold-down clamp according to the following steps.

1. There are two rows of notches on both sides of the hold-down clamp for inserting into rubber cushions provided in the accessory. One side is for PCI cards, while the other side is for ISA cards. Depending on the card height, the cushions can be inserted upward or downward. After the rubber cushions have been inserted into the notches, they will stabilize the add-on cards to protect them from shock and vibration. (see Figure 2.6)
2. Put the hold-down clamp back into its original position. Please note that the circle hole on the hold-down clamp faces left rear. (See Figure 2.7).
3. Secure the hold down clamp to the chassis with the two screws.

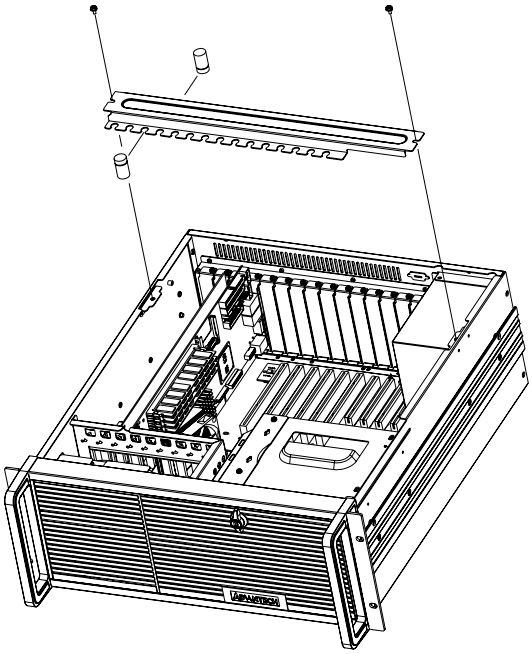

Figure 2.6 Installing hold-down clamp and rubber cushions

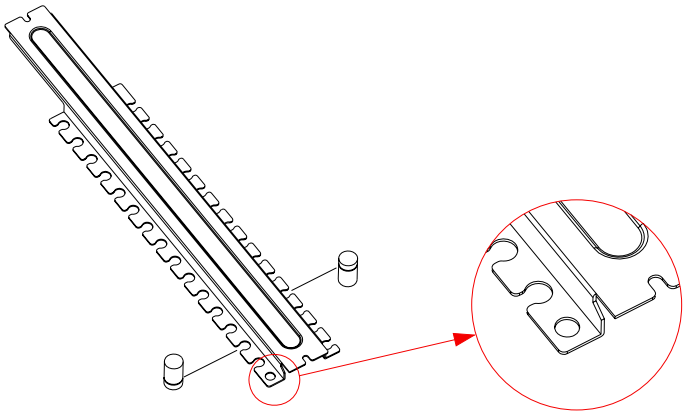

Figure 2.7 The circular hole on the hold-down clamp

2.5 Installing Disk Drives

The disk drive housing supports three 5.25" and two 3.5" disk drive devices. Please follow these steps for installation.

1. Undo the four screws on the top of the disk drive housing and then lift it up. (see Figure 2.8)
2. Loosen the two screws on top left of the housing to remove the brackets for fixing the 3.5" FDD or HDD. And then remove the screws on both sides of the front covers in case the user needs to install the front-accessible disk drives. (see Figure 2.9)
3. Insert the disk drives into the proper location in the disk drive housing, and secure them with the supplied screws. (see Figure 2.10)
4. Connect the suitable cables (ex. IDE, SCSI, SATA or SAS, etc.) from the CPU card or motherboard to the various disk drives.Then plug the power connector into each disk drive.
5. Replace the disk drive housing and fasten it with the four screws.

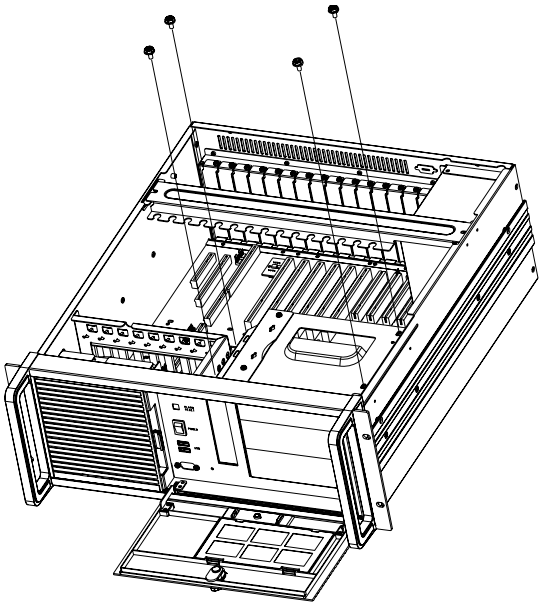

Figure 2.8 Removing the disk drive housing

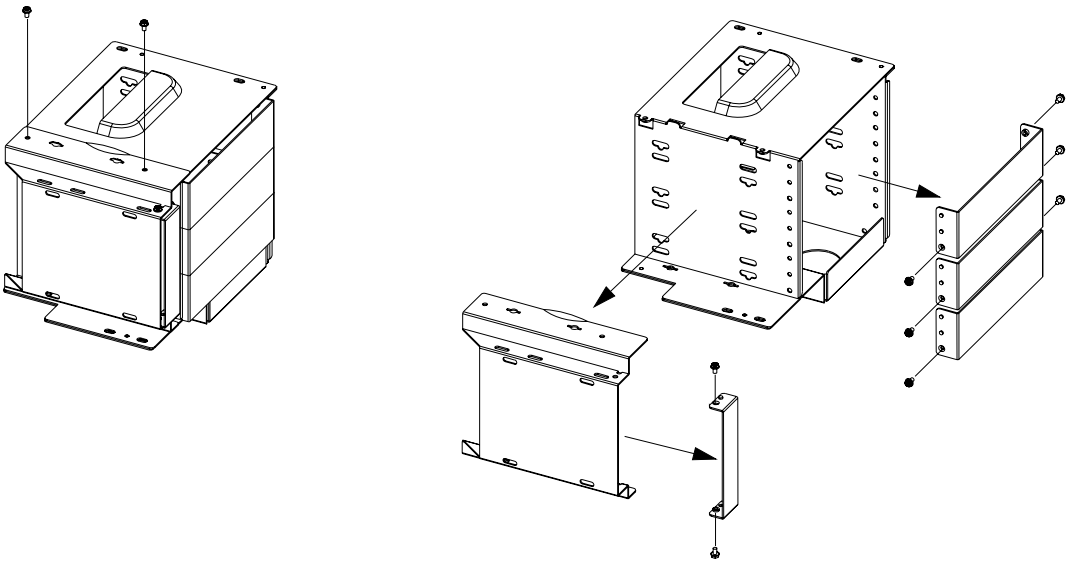

Figure 2.9 Removing the 3.5" FDD brackets and front covers

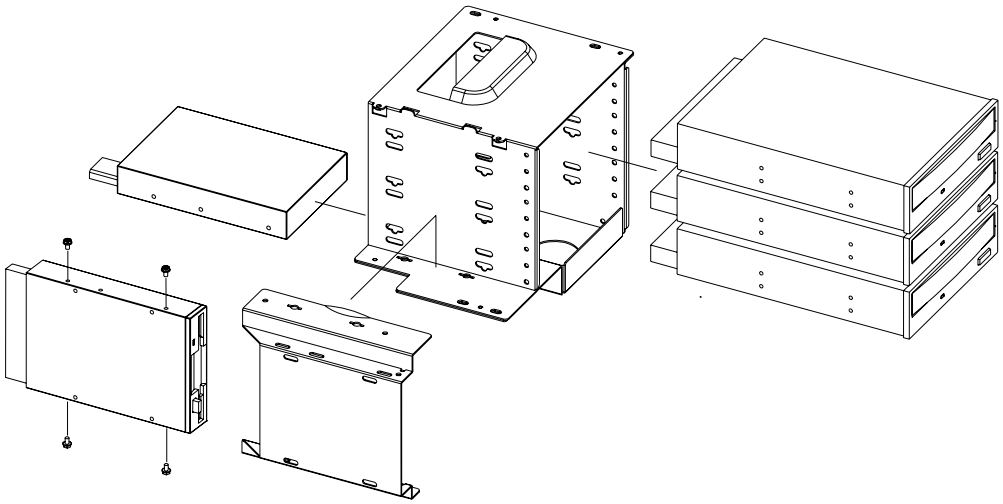

Figure 2.10 Installing the disk drives

2.6 Attaching the Ears

There is a pair of ears for the front panel in the accessory box. If you need to install the chassis on the rack, please refer to Figure 2.11 to simply fasten them to the front-right and front-left edges with the four screws provided. If you have prepared the slide rails and plan to attach them onto the chassis, please detach the decorated bars on both sides of the chassis first.

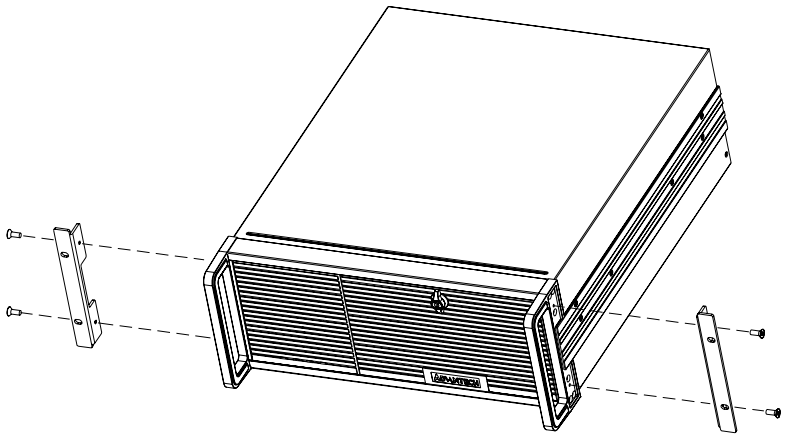

Figure 2.11 Attaching the ears

Chapter 3

Operation

This chapter introduces the system operation information.

Sections include:

- The front panel
- The rear panel
- Replacing the cooling fan
- Cleaning the filter
- Replacing the power supply

3.1 The Front Panel

The front panel features the lockable door and four LED indicators. The user can close the door with or without the key with the user-friendly rotary lock. When opening the door, there is a System Reset button, an Alarm Reset button, a momentary power switch, a dual USB port and a reserved 9-pin D-SUB opening. The individual functions are described as below.

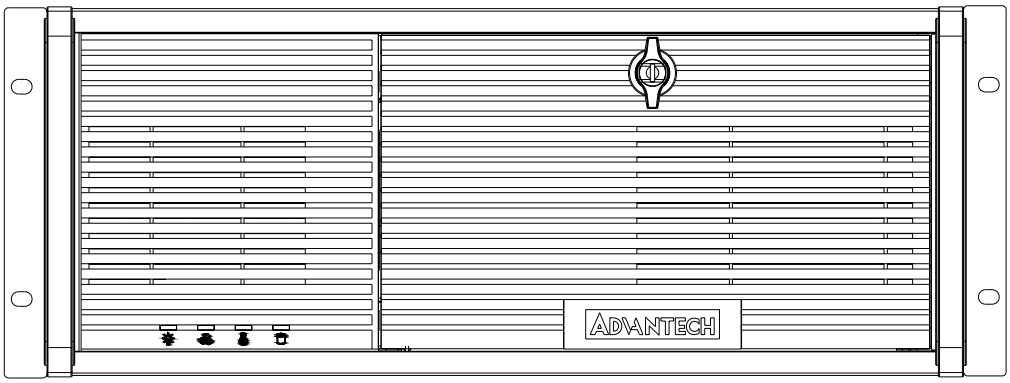

Figure 3.1 Closed Front panel

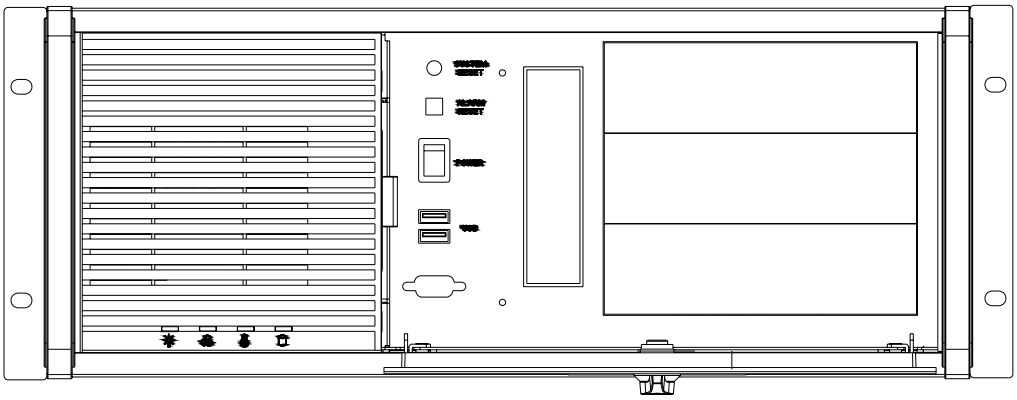

Figure 3.2 Open Front panel

3.1.1 Switches, Buttons and Front I/O Interfaces

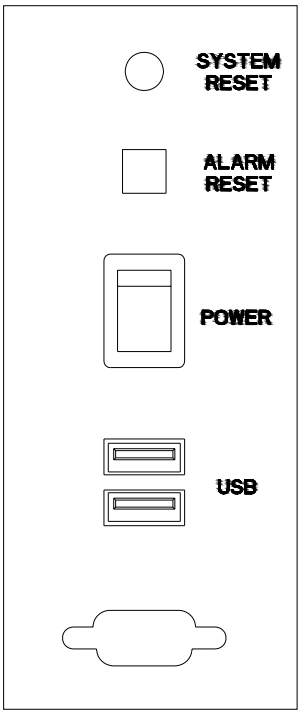

Figure 3.3 Switch, buttons and front I/O interfaces

Three switches are located on the front plate, behind the front door.

System Reset button: Press this button to reboot the system.

Alarm Reset button: Whenever a fault occurs in the system (e.g., fan failure or the temperature in the chassis is too high), an audible alarm will be activated. Pressing this button will stop the alarm from beeping.

Momentary Power switch: Press this switch to turn the system power on or off. Please use system shutdown or press this switch for few seconds to turn off the system ATX power.

Dual USB port: For connecting a wide range of USB devices for data transfer, backup or input.

9-pin D-SUB opening: Reserved for a 9-pin COM port.

3.1.2 LED indicators

Four LEDs (see *Figure 3.4* above) are placed on the left side of the front panel on the IPC-630 chassis to indicate system health and activity. Please refer to *Table 3.1* for the LED definition summary.

Table 3.1: LED indicator functions

LED	Description	Green	Red
Power	System power	Normal	Abnormal
Fan	Cooling fan status	Normal	Abnormal
Temperature	Temperature in the chassis	Normal	Abnormal
Hard Disk	Hard disk drive activity	Data access	No light

When the system powers is on, the **power LED** is always **Green**.

When the **power LED** is **RED**, it indicates a redundant power supply module failure. To stop the alarm beep, press the **Alarm Reset** button. Examine the redundant power supply module right away and replace the failed module with a good one.

When the **fan LED** is **RED**, it indicates a failed cooling fan, and the alarm is also activated. To stop the alarm beep, press the **Alarm Reset** button and then replace the failed fan with a good one immediately.

If the **temperature LED** is **RED**, it means that inside of the chassis is overheated. An audible alarm will be activated. Press the **Alarm Reset** button to stop the alarm beep. Inspect the system fan and its filter and the rear of the chassis immediately. Make sure the airflow inside the chassis is smooth and not blocked by dust or other particles.

3.2 The Rear Panel

For the backplane version, the rear plate includes with 15-slot I/O brackets and a reserved 9-pin D-SUB opening. (see *Figure 3.4*). For the motherboard version, the rear plate includes with 7-slot I/O brackets, 5 reserved 9-pin D-SUB openings and a 68-pin SCSI opening. (see *Figure 3.5*).

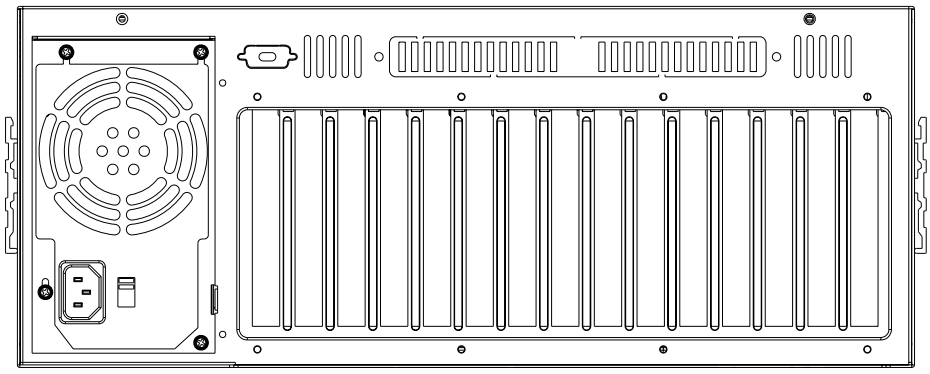

Figure 3.4 Rear panel of backplane version

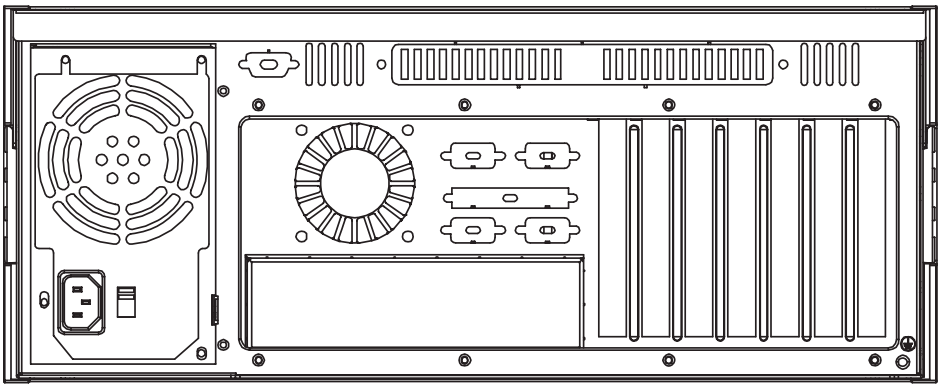

Figure 3.5 Rear panel of motherboard version

There is a ground screw with a washer located on the lower right of the rear panel. This will protect the system in case the electric leakage happens.

3.3 Replacing the Cooling Fan

There is one cooling fan located on the front left of the chassis. The fan provides the system with ample cooling by blowing air toward the rear. If the fan fails, the alarm will beep. Simply press the **Alarm Reset** button to stop the alarm and replace the failed fan right away. Please proceed according to the instructions below.

1. Remove the top cover.
2. Unplug the fan power connector.
3. Undo the screw on top of the fan module and take the fan module out. (see *Figure 3.6*)
4. Loosen four screws on the fan bracket and the four screws on the fan guard (not the screws on the fan) and replace it with a new fan. (see *Figure 3.7*)
5. Attach the new cooling fan on the bracket and fan guard by screwing in the eight screws.
6. Reconnect the fan power connector.
7. Replace the fan module into the chassis and then screw the one screw onto the chassis.

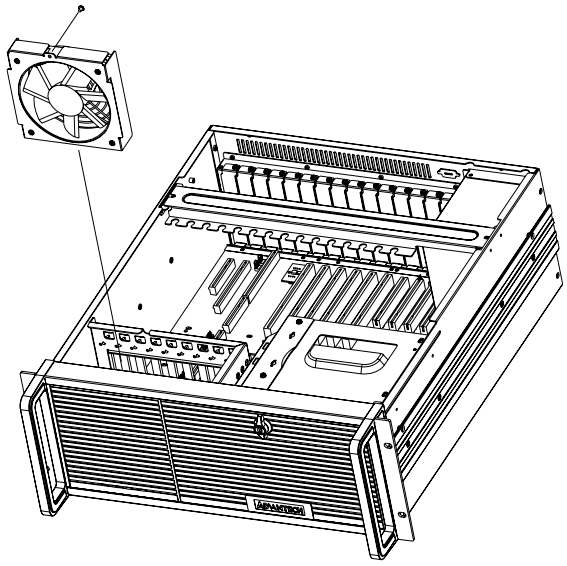

Figure 3.6 Undo the single screw to remove the fan module

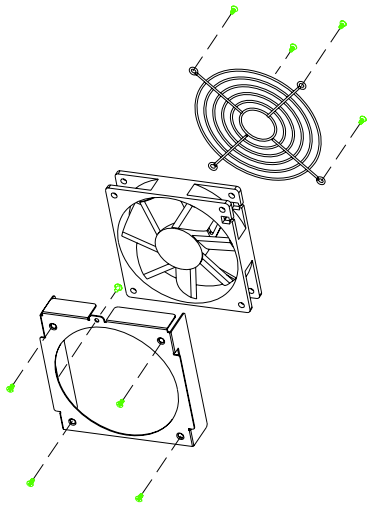

Figure 3.7 Replacing the fan

3.4 Cleaning the Filter

The filter prevents dust or particles from entering the work environment and extends longevity of the system. It's better to clean the filters periodically. There are two reusable filters behind the front door and the left front of the chassis. To remove and clean the filter, proceed as follows.

1. Open the front door.
2. Pull out the filter behind the front door by pushing the two clips; pull out the fan filter by pushing the hook and then slide it to the right. (see *Figure 3.8* and *3.9*)
3. Clean the filters by a soft brush or wash the dust away from the filter with running water, then dry it.
4. Replace them inside the unit.

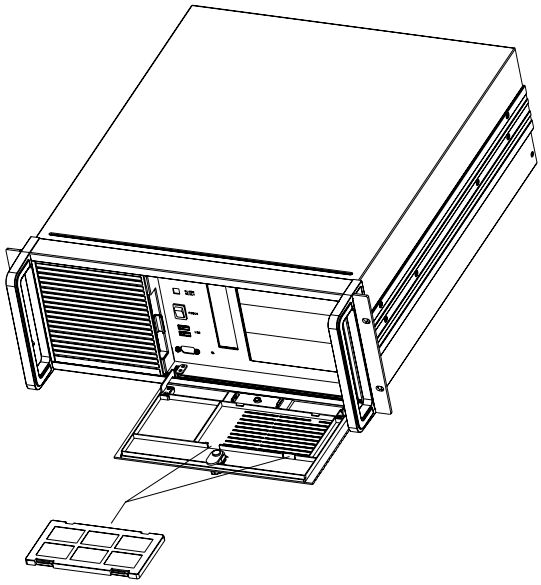

Figure 3.8 Removing the front door filter

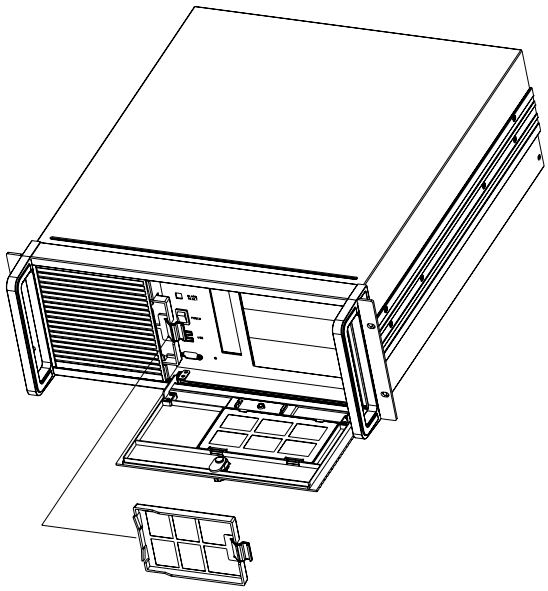

Figure 3.9 Removing the fan filter

3.5 Replacing the Power Supply

The IPC-630 supports either a PS/2 single power supply or a redundant power supply. To replace the power supply, please proceed:

3.5.1 The single power supply model

To replace the single power supply, please follow these instructions:

1. Unplug the power cord from the power supply.
2. Remove the top cover and the hold-down clamp.
3. Unplug the 20-pin (or 24-pin) ATX power connector and 4-pin +12V power connector from the backplane. And unplug other power connectors from the disk drives.
4. Remove the four screws located on the power supply bracket and the two screws inside of the left plate and then remove the power supply. (see *Figure 3.10*)
5. Place a new power supply into the power supply bracket and fasten it with the six screws.
6. Plug the 20-pin (or 24-pin) ATX power connector and 4-pin +12V power connector to the backplane. And plug other power connectors to the essential disk drives.
7. Replace the hold-down clamp and top cover. Plug in the power cord.

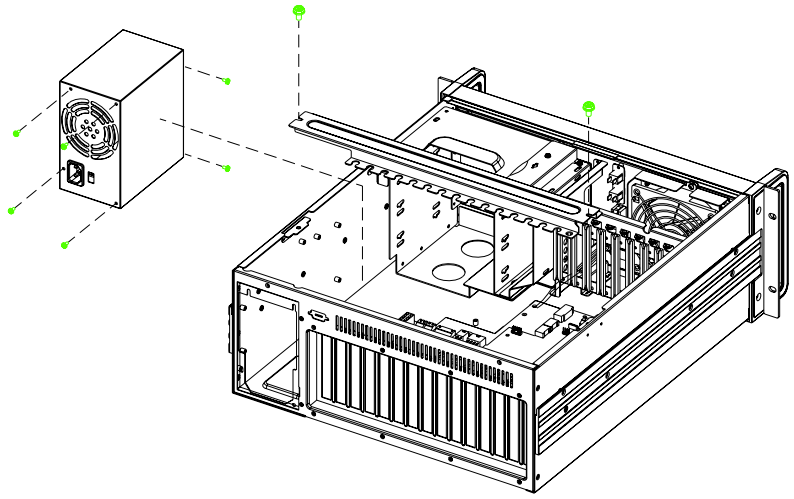

Figure 3.10 Replacing the single power supply

3.5.2 The redundant power supply model

In this configuration, there is a redundant power supply with two modules which are hot-swappable. To replace the redundant power supply module, please follow these instructions:

1. Turn off the power switch of the failed power supply module. Then loosen the screw on it and then grab the handle to gently pull it out. (see *Figure 3.11* & *Figure 3.12*)
2. Make sure that the new power supply module is the same rating as the currently installed one.
3. Slide the new power supply module inward until it locks into the right position.
4. Secure the screw and replace the handle.

Figure 3.11 Replacing the 300W redundant power supply module

Figure 3.12 Replacing the 400W redundant power supply module

Note! *When you plug two power cords into the same bank of sockets, please align them in the same direction* (see *Figure 3.13*).

Figure 3.13 Power cord plugs orientation on the socket

Chapter 4

Alarm Board

This chapter introduces the alarm board and thermal sensor specifications.

Sections include:

- Alarm board layout
- Alarm board specifications
- Thermal sensor

The alarm board is located under the system fan. The alarm board makes an audible alarm if:

- Any power supply module of redundant power supply fails
- The system fan fails
- Internal temperature of the chassis rises too high

To stop the alarm beep, simply press the Alarm Reset button on the front panel.

4.1 Alarm Board Layout

The layout and detailed specifications of the alarm board are given below:

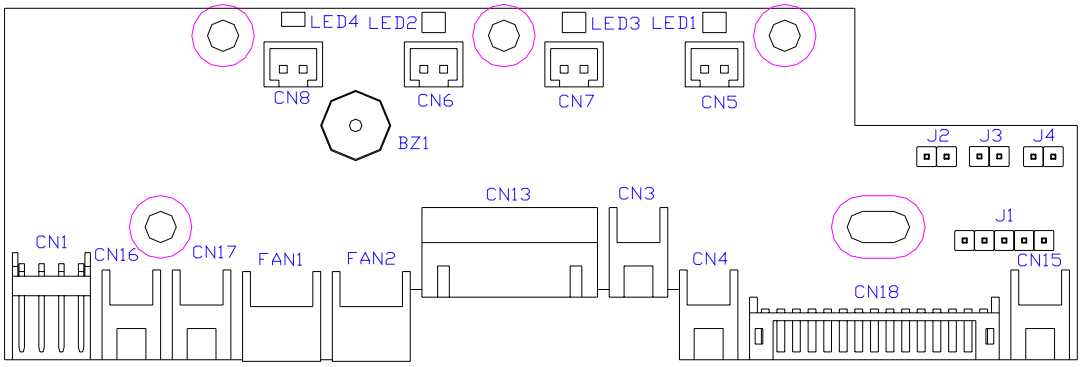

Figure 4.1 Alarm board layout

4.2 Alarm Board Specifications

Input Power: +5V, +12V

Input Signals:

- 2 fan connectors
- One thermal sensor connector
- One power good input
- One alarm reset input
- One voltage signal connector (optional, connect from power supply, includes +/-12V, +/-5V, +3.3V)
- One HDD LED connector (connect from the CPU card/motherboard)

Output Signals:

- One LED board connector (optional)

Pin Definition:

Table 4.1: Summary of the connectors on the alarm board			
CN1: Auxiliary External Power Connector, standard mini 4-pin power connector			
Pin 1	+5 V	**Pin 3**	GND
Pin 2	GND	**Pin 4**	+12 V
CN3: External HDD LED connector			
Pin 1	VCC	**Pin 2**	HLED_ACT
CN4: Thermal sensor connector			
Pin 1	GND	**Pin 2**	TEMP

Table 4.1: Summary of the connectors on the alarm board			
CN5: Power LED connector			
Pin 1	Power Good	**Pin 2**	Power Fail
CN6: Temperature LED connector			
Pin 1	TEMP Good	**Pin 2**	TEMP Fail
CN7: Fan LED connector			
Pin 1	Fan Good	**Pin 2**	Fan Fail
CN8: HDD LED connector			
Pin 1	HDD	**Pin 2**	GND
CN13: Voltage detect input connector			
Pin 1	5 VSB	**Pin 5**	+5 V
Pin 2	GND	**Pin 6**	+3.3 V
Pin 3	GND	**Pin 7**	-12 V
Pin 4	-5 V	**Pin 8**	+12 V
CN15: I^2C connector			
Pin 1	SCL	**Pin 2**	SDA
CN16: Power Good input			
Pin 1	GND	**Pin 2**	Power Fail
CN17: Alarm Reset connector			
Pin 1	GND	**Pin 2**	Alarm Reset
CN18: LED Board connector			
Pin 1	GND	**Pin 9**	Temperature Good
Pin 2	+5 V	**Pin 10**	Temperature Fail
Pin 3	+12 V	**Pin 11**	Fan Good
Pin 4	-5 V	**Pin 12**	Fan Fail
Pin 5	-12 V	**Pin 13**	N/A
Pin 6	HDD	**Pin 14**	+3.3 V
Pin 7	Power Good	**Pin 15**	5VSB
Pin 8	Power Fail		
FAN1 & FAN2: Fan power connector			
Pin 1	GND	**Pin 3**	FAN_DEC1 (FAN1)
Pin 2	+12V		FAN_DEC2 (FAN2)
J1: PIC Program connector			
Pin 1	GND	**Pin 4**	TEMP
Pin 2	MCLR#	**Pin 5**	VCC
Pin 3	ICSPCLK		

4.3 Jumper Settings

Table 4.2: J2, PIC Clear jumper	
Normal	Open (default)
Clear	Short

Table 4.3: J3, Thermal Sensor jumper	
One sensor	Open (default)
Disable	Short

Table 4.4: J4, Fan Option jumper	
One fan	Open (default)
Two fans	Short

4.4 Thermal Sensor

There is a thermal sensor near the left rear of the chassis. Please refer to *Figure 4.2* to find the location.

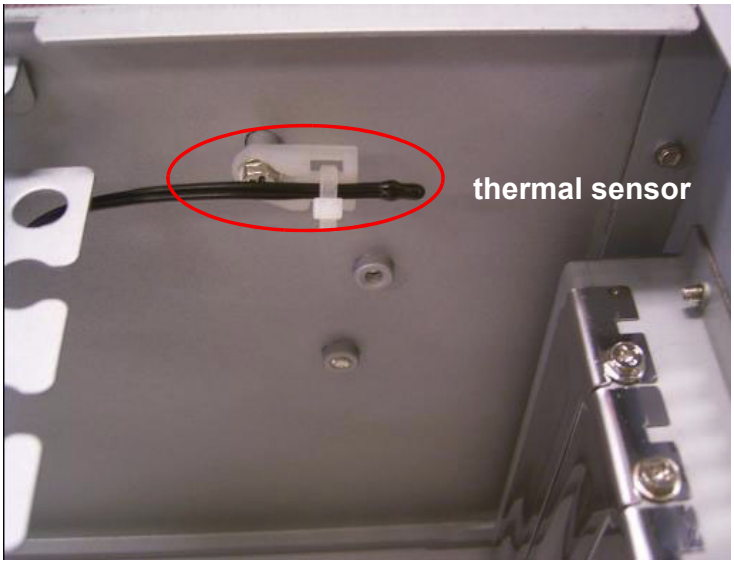

Figure 4.2 Thermal sensor location

If the machine overheats, the temperature sensor will send a signal to the alarm board and a continuous alarm will sound. To stop the alarm from beeping, press the **Alarm Reset** button on the front panel.

Appendix A

Exploded Diagrams

A.1 Exploded Diagram

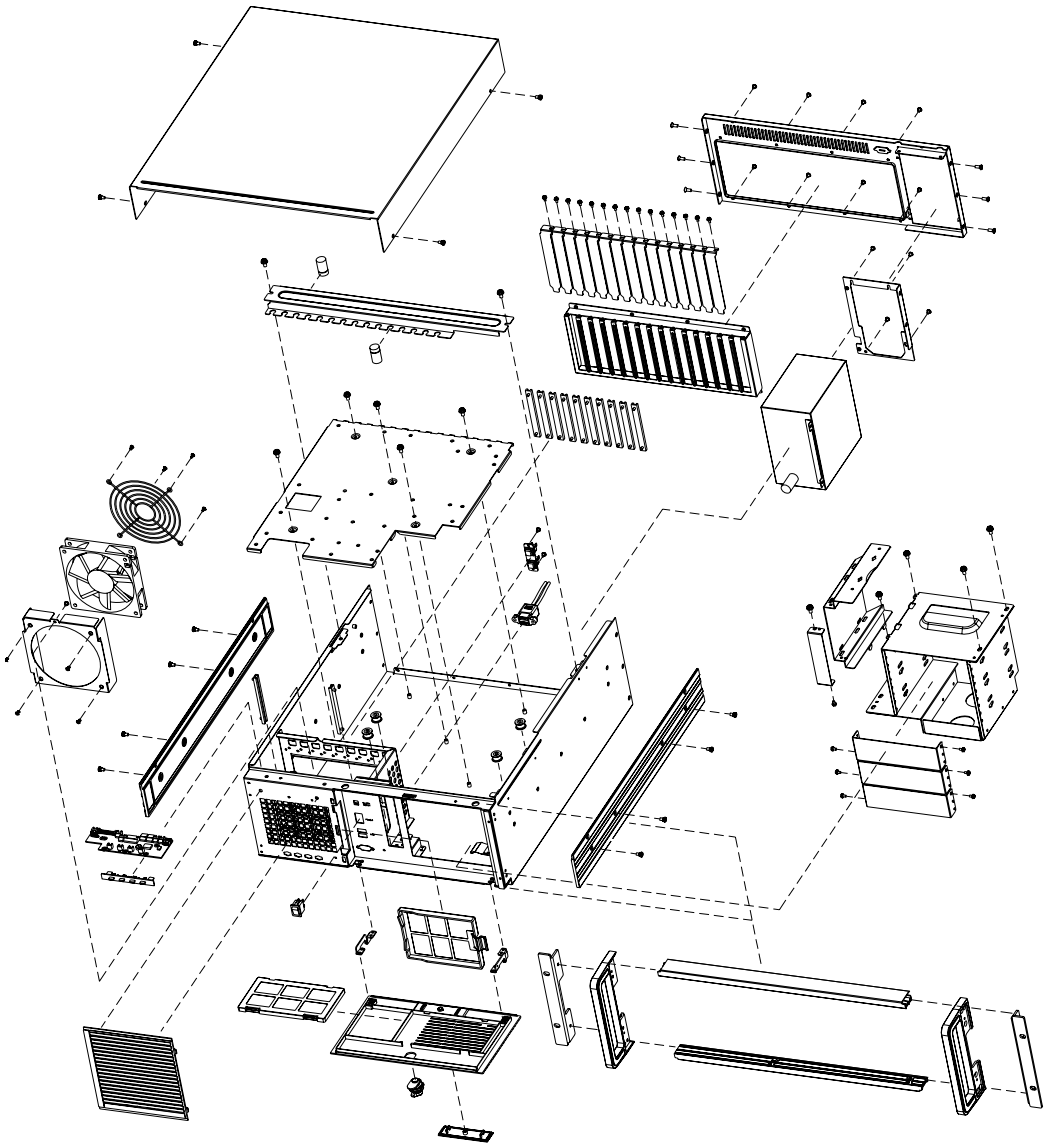

Figure A.1 Exploded diagram of the Backplane version

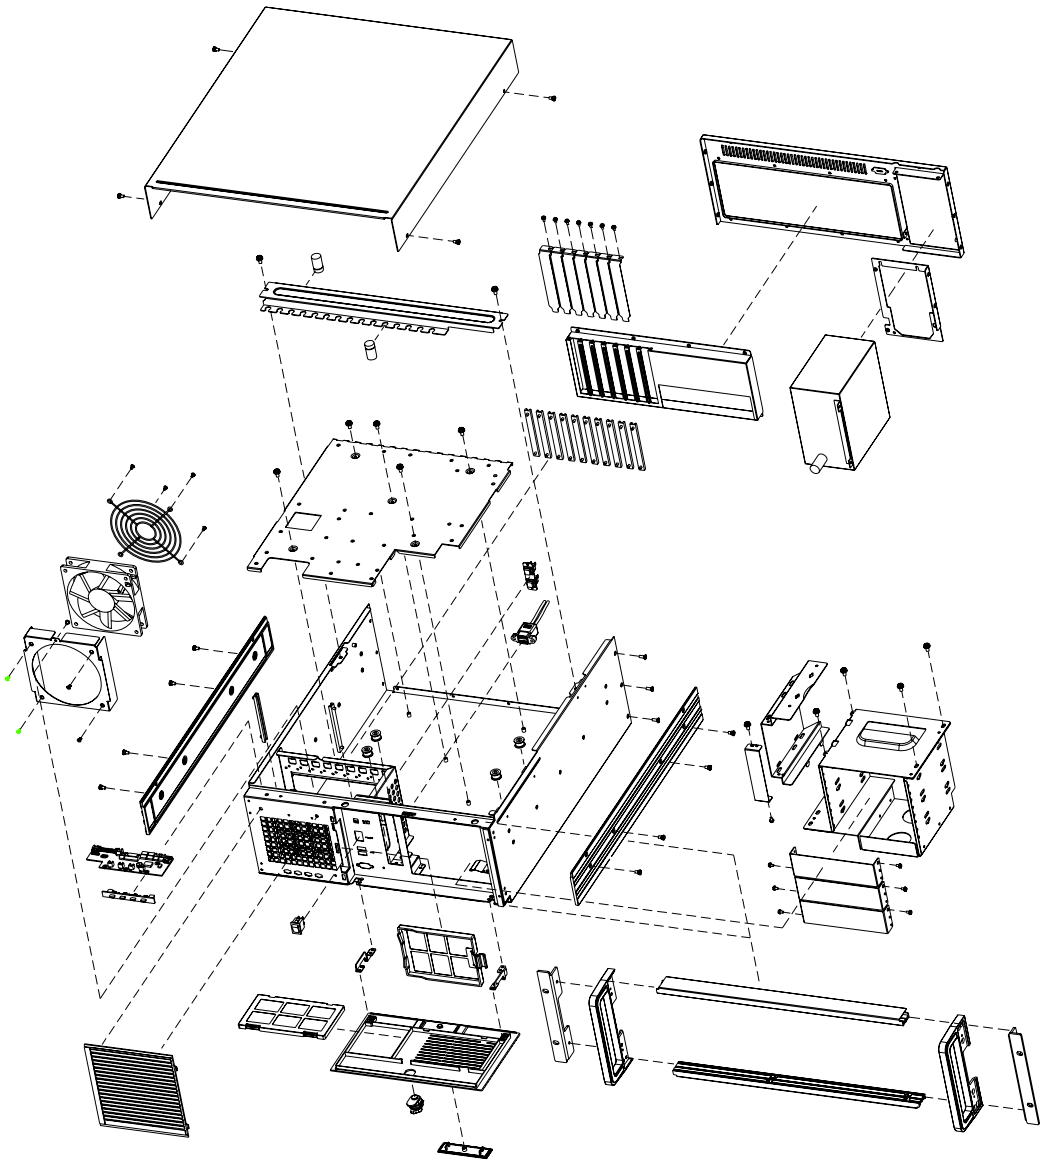

Figure A.2 Exploded diagram of the Motherboard version

Appendix B

Backplane and Motherboard Options

B.1 Backplane Options

IPC-630 supports a variety of up to 15-slot backplanes. Users can contact a local sales representative for detailed specification and information.

Table B.1: PICMG 1.3 Backplane options

Model Name	Segment	Slots				
		SHB*	PCIe x16	PCIe x 8	PCI-X	PCI
PCE-7B13	Single	1	-	2	6	4
PCE-5B12	Single	1	1	-	6	4

*SHB: System Host Board

Table B.2: PICMG 1.0 Backplane options

Model Name	Segment	Slots			
		PICMG	PICMG/PCI	PCI	ISA
PCA-6114	Single	-	-	-	14
PCA-6114P4	Single	2	-	4	8
PCA-6114P7	Single	3	1	6	4
PCA-6114P10	Single	2	-	10	2
PCA-6114P12	Single	1	1	11	1
PCA-6114P12X	Single	1	1	11	1
PCA-6113P4R	Single	2	-	4	7
PCA-6113P7XE	Single	2	-	7	4

B.2 Motherboard Options

IPC-630 supports a variety of Advantech ATX/microATX motherboards as below. You can contact a local sales representative for detailed information.

Table B.3: ATX Motherboard Options

Model Name	Bus				
	PCI	PCI/ISA	ISA	AGP	SATA
AIMB-742	4 (32-bit)	1	1	1 (8X)	-
AIMB-744	2 (PCI-X 64-bit) 4 (PCI 32-bit)	-	-	1 (8X)	2
AIMB-750	2 (PCI-X 64-bit) 4 (PCI 32-bit)	-	-	1 (4X)	2
AIMB-762	1 (PCIe 16X) 1 (PCIe 4X) 5 (PCI 32-bit)	-	-	-	4
AIMB-763	1 (PCIe 16X) 1 (PCIe 1X) 5 (PCI 32-bit)	-	-	-	4
AIMB-764	1 (PCIe 16X) 1 (PCIe 4X) 5 (PCI 32-bit)	-	-	-	5
AIMB-766	1 (PCIe 16X) 2 (PCIe 1X) 4 (PCI 32-bit)	-	-	-	6

Table B.4: MicroATX Motherboard Options

Model Name	Bus		
	PCI	AGP	SATA
AIMB-564	1 (PCIe x16), 1 (PCIe x4), 2 (PCI 32-bit)	-	7
AIMB-562	1 (PCIe x16), 1 (PCIe x1), 2 (PCI 32-bit)	-	4
AIMB-560	3 (PCI 32-bit)	-	4
AIMB-556	1 (PCIe x16), 1 (PCIe x4), 2 (PCI 32-bit)	-	4
AIMB-554	1 (PCIe x16), 1 (PCIe x4), 2 (PCI 32-bit)	-	2
AIMB-542	3 (PCI 32-bit)	1	2

Trusted ePlatform Services

ADVANTECH

www.advantech.com

Please verify specifications before quoting. This guide is intended for reference purposes only.

All product specifications are subject to change without notice.

No part of this publication may be reproduced in any form or by any means, electronic, photocopying, recording or otherwise, without prior written permission of the publisher.

All brand and product names are trademarks or registered trademarks of their respective companies.

© Advantech Co., Ltd. 2009